


25 KV

ELASTIMOLD®

CONNECTOR 750 MCM
ELASTIMOLD 03700-380
CUT TO LENGTH SHOWN
SWAGE CONNECTOR WITH 1382 DIE

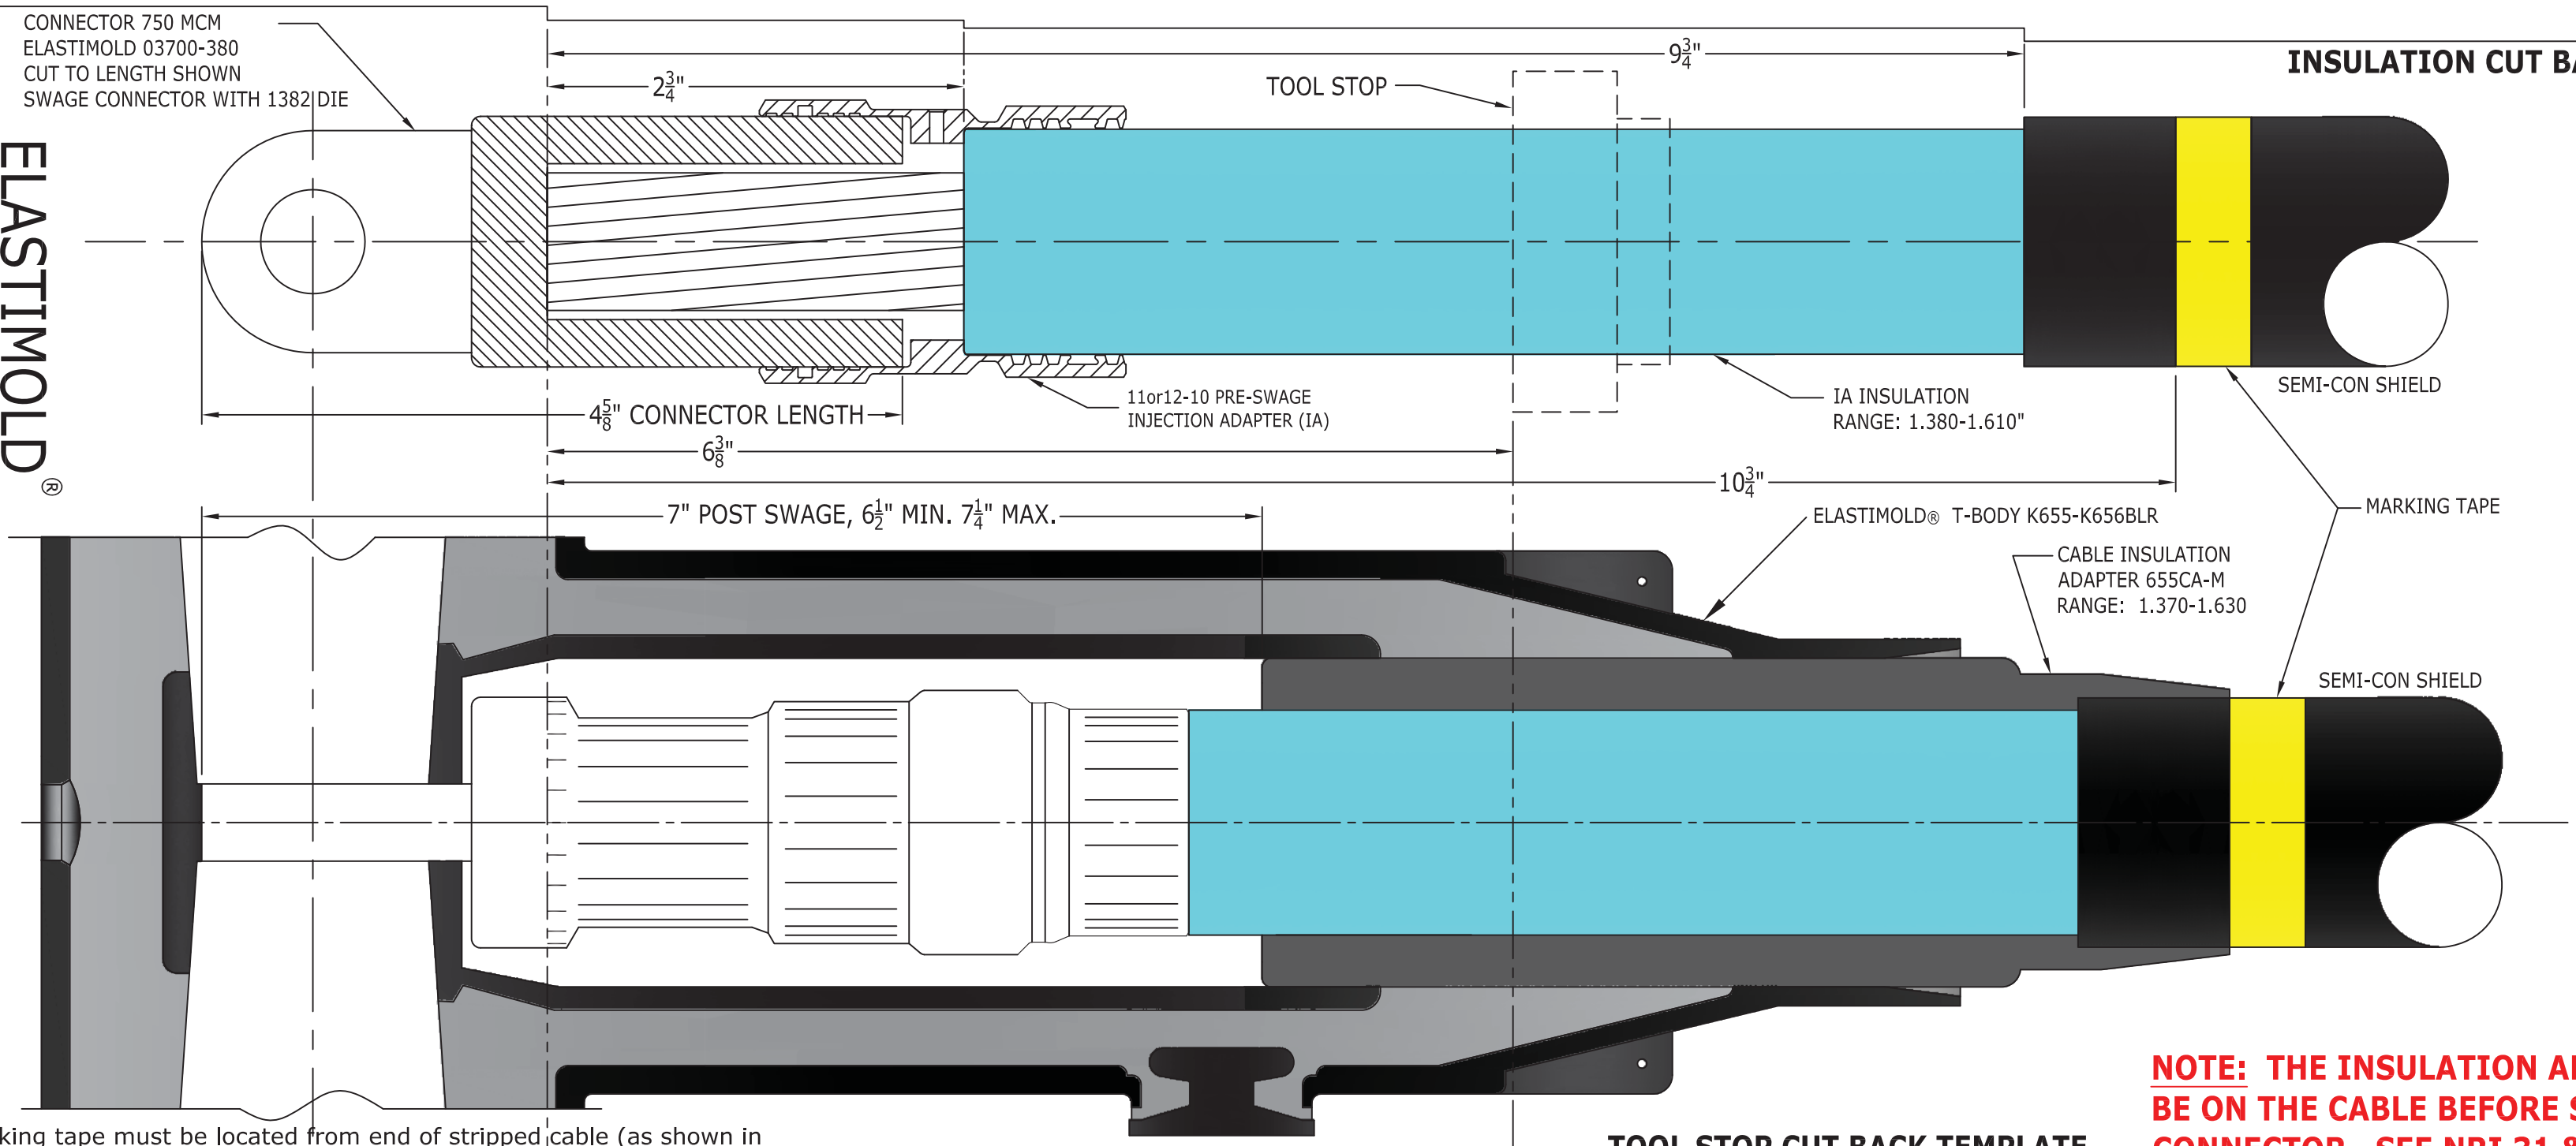

The marking tape must be located from end of stripped cable (as shown in pre-swage). The end of cable insulation adapter should be within 1/4 inch [6mm] of the tape after swage.

TOOL STOP CUT BACK TEMPLATE

NOTE: THE INSULATION ADAPTER MUST BE ON THE CABLE BEFORE SWAGING THE CONNECTOR. SEE NRI 31 & NRI 32

EMD-25 K655-656BLR-M 750
11to12-10 20nov13



© www.novinium.com/patents.aspx
IA is protected by patents and patents pending

ELASTIMOLD is a registered trademark of Thomas & Betts Corp. novinium is a registered trademark of novinium. (Printing instructions: For best results, print in color, protect w/5mil laminate and trim to size.)



novinium
masters of reliability

SCALE: 1:1

8.5 x 20 paper size